

VIS-T PRO User(rider) manual

- Side stand :** When side stand down, gear position in idle & engine running. Neutral indicate will be blink. This side stand indicate can be disable by follow VIS-T setting page. When disable side stand indicate. Neutral indicate not blink anymore.
- N gear position :** Gear position in idle. Event engine running or not.
- Low fuel :** Low fuel warning. This indicate always show up if fuel level going low in gas tank.
- Turn signal :** Blinked when turn signal currently in use.
- Engine light :** Warning engine light show up. Something going wrong. Diagnostic engine code to solve this issue.

⚠ This warning very critical. Please stop engine immediately. ⚠

Coolant temperature over 110 C° : Check water cooling level or leaked point immediately.

Low oil pressure : Oil pressure is too low. Refill motor oil.

VIS-T PRO can control by press & hold **i** button until indicate show up as table below and then release button to change state. Riding mode can use "MODE" button on OEM handle bar to change riding mode as well.

Some models bike don't have MODE & ABS control. This control sequence will not show any indicate & ignored that option.

Please keep pressing **i** button until get next control option. If don't seen any indicate can release button to cancel.

After entered.

Fuel level light signal indicate, SPEED & RPM will show up as table below. For 10 seconds or press **i** to return..

Traction control & ABS control will show operate as table below. Please wait until indicator process complete.

Indicator display Status	Indicator after engine running			
	Neutral N	Turn	High beam	Warning
Side stand	Blink			
N gear position	On			
Low fuel	Always on			
Turn signal	Blink			
Coolant temp over 110 °C			Flash	Flash
Low oil pressure warning				Flash
Engine light				Always on

Press & hold **i button until indicate show up As table below. Release button to setting.**

Control sequence	Indicator light			
	Neutral N	Turn	High beam	Warning
Fuel level ↓			ON	ON
Ride mode ↓		ON	ON	ON
TC control ↓			ON	
ABS control ↓		ON		
Cancel	OFF	OFF	OFF	OFF

Ride mode & ABS not available for some models. Control will be ignored.

Fuel level + blink (SPEED&RPM show as table)

Fuel level	Speed	RPM
10%	10 km/h	1000
20%	20 km/h	1500
30%	30 km/h	2000
40%	40 km/h	2500
50%	50 km/h	3000
60%	60 km/h	3500
70%	70 km/h	4000
80%	80 km/h	4500
90%	90 km/h	5000
100%	100 km/h	5500

Mode + + Blink 3 seconds (Mode changed)

	Speed	RPM	On 2 sec.	Mode operate depend on models. If not support this function will ignored.
RAIN	20	2000		
ROAD	40	4000		
SPORT	60	6000		

Traction control Blink 3 seconds

	Speed	RPM	2 Sec.
OFF (Deactivate)	10	0	OFF
On (TC operate)	40	4000	ON

ABS control Blink 3 seconds

	Speed	RPM	2 Sec.
OFF (Deactivate)	10	0	OFF
On (ABS activated)	40	4000	ON

ABS control support for some models. If that models don't have this function ABS always activated.