



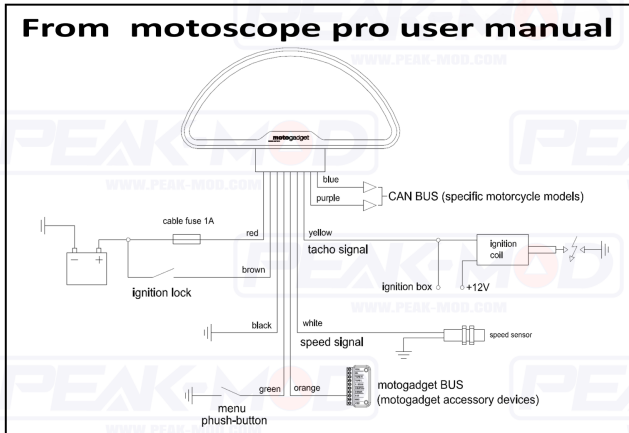

Use one
msp Breakout box A
OR
msp Breakout box B

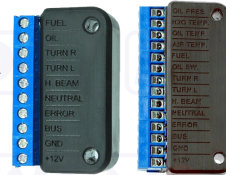



Power Connectors.

- 16. +12 Volt form Battery. (Connected directly to +battery. Please carefully. ⚠)
- 17. +12 Volt form ignition key.
- 18. Signal form internal flasher relay (Internal connected to OEM turn switch.)
- 19. Ground (-)

⚠ Cautious

Power connectors 16 & 17 currents not exceed 1 amp.
Please install glass fuse for protection internal break circuit.
Note. All output 4 to 15 max currents at 0.02Amps per channel.

FOR Motoscope PRO
Go to Param menu
>> CIRC set to 2000
>> ImpW set to 1
>> ImpE set to 1

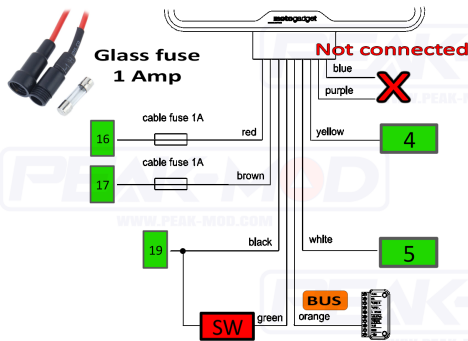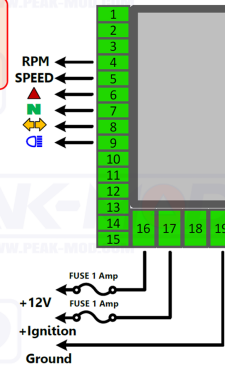


msp Breakout box

17	+12V
19	GND
6	Oil, Oil SW
7	Neutral
8	Turn R or L
9	H. Beam





⚠ SW Connect to external momentary switch.
For control motoscope pro itself.
DO NOT CONNECT TO 1

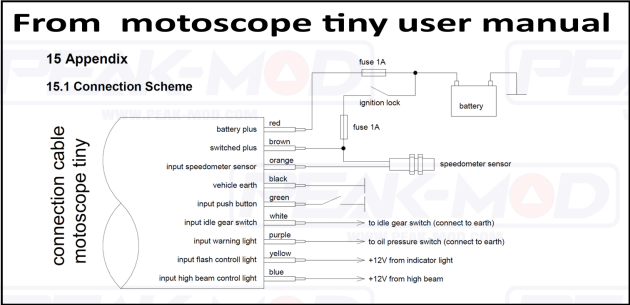


Power Connectors.
 16. +12 Volt form Battery. (Connected directly to +battery. Please carefully. ⚠)
 17. +12 Volt form ignition key.
 18. Signal form internal flasher relay (Internal connected to OEM turn switch.)
 19. Ground (-)

⚠ Caution
 Power connectors 16 & 17 currents not exceed 1 amp.
 Please install glass fuse for protection internal break circuit.
 Note. All output 4 to 15 max currents at 0.02Amps per channel.

For Motoscope tiny
 Goto setup menu
 >> menu 3 (SET PULSE) set to 1
 >> menu 4 (SET CIRC) set to 2000

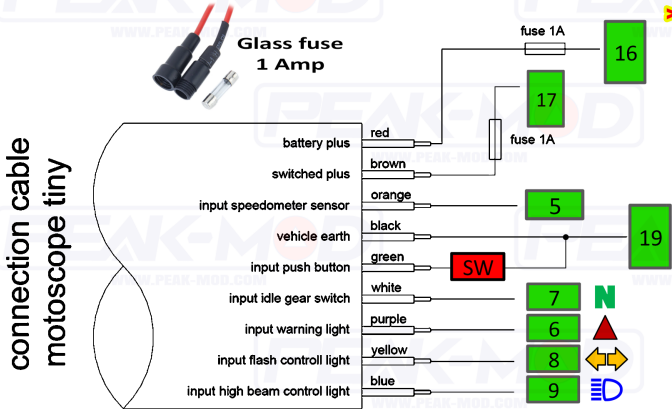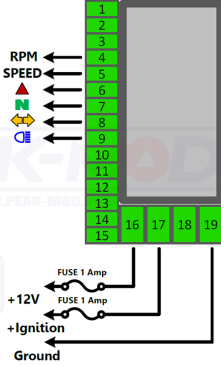




⚠ SW Connect to external momentary switch. For control motoscope tiny itself.
 DO NOT CONNECT TO 1

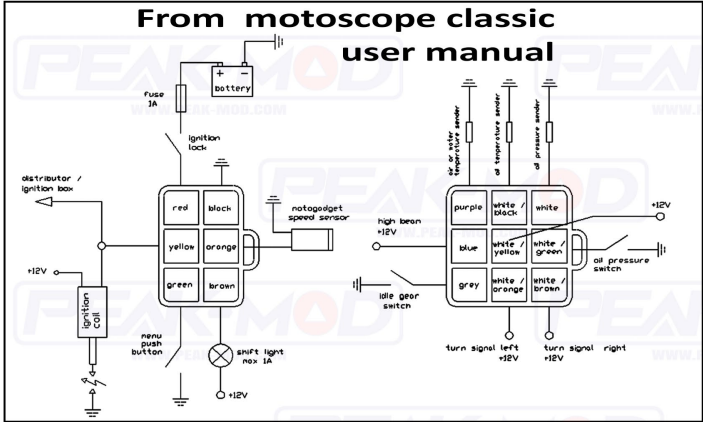

Power Connectors.
 16. +12 Volt form Battery. (Connected directly to +battery. Please carefully. ⚠)
 17. +12 Volt form ignition key.
 18. Signal form internal flasher relay (Internal connected to OEM turn switch.)
 19. Ground (-)

⚠ Cautious
 Power connectors 16 & 17 currents not exceed 1 amp.
 Please install glass fuse for protection internal break circuit.
 Note. All output 4 to 15 max currents at 0.02Amps per channel.

For Motoscope classic
Goto Param menu
 >> WHLSIZE set to 2000
 >> ImpWHL set to 1
 >> ImpENG set to 1

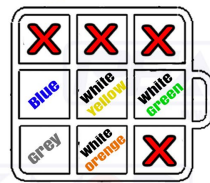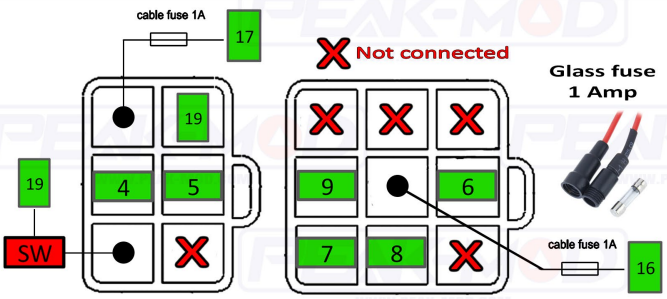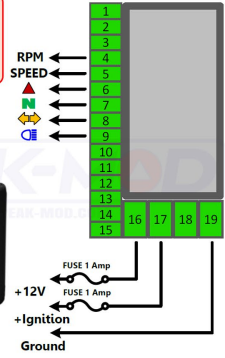



⚠ SW Connect to external momentary switch.
 For control motoscope classic itself.
DO NOT CONNECT TO 1



From motoscope mini user manual

16 Appendix

16.1 Connection Scheme

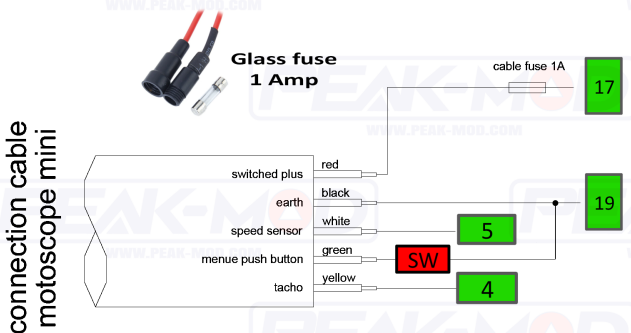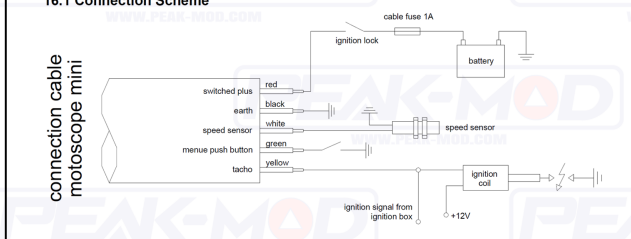


Power Connectors.

- 16. +12 Volt form Battery. (Connected directly to +battery. Please carefully. ⚠)
- 17. +12 Volt form ignition key.
- 18. Signal form internal flasher relay (Internal connected to OEM turn switch.)
- 19. Ground (-)

⚠ Cautious

Power connectors 16 & 17 currents not exceed 1 amp.
Please install glass fuse for protection internal break circuit.
Note. All output 4 to 15 max currents at 0.02Amps per channel.

For Motoscope mini
Goto Param menu
>> Circ set to 2000
>> Impw set to 1
>> ImpE set to 1

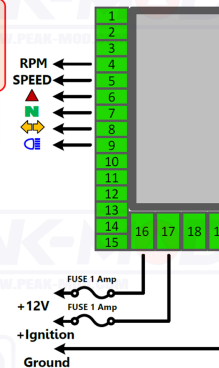

Connect to external momentary switch.
For control motoscope mini itself.

DO NOT CONNECT TO **1**